























Place Motor Head onto Inner Pipe and Tighten Set Knob. (make sure the set knob is loosened enough to slide on)

## Remove Grill Nut















