



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed :


1. Please read all of the instructions before using the product.
2. This fan is only for intended use as described in the instructional manual.
3. Never place insert an against electrical hazard, DO NOT place fan near a window, immerse fan, plug or cord in water or spray with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the fan when relocating, cleaning or the fan is not in use.
6. Avoid contacting moving parts.
7. Do not operate in the presence of explosive and / or flammable fumes.
8. Do not place fan or parts near an open flame, cooking or other heating appliance.
9. Do not operate fan with a damaged cord, plug or after the fan malfunctions or has been dropped or damaged in any manner.
10. Do not use any attachments that are not included or sold by the appliance manufacturer. Such use may cause fire or physical / electrical hazards.
11. Do not use outdoors.
12. Do not let cord hang over the edge of a table or counter, or let or touch any hot surfaces.
13. To disconnect, grip plug and pull from wall outlet, Never yank cord.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate without the fan grill properly in place.
16. Always use on a dry level surface.
17. This appliance has a polarized plug (one blade is wider than the other) To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defect this safety feature.

WARNING:

1. To reduce the risk of fire or electrical hazard, do not use this fan with any solid state speed control device.
2. Unplug or disconnect the fan from the power supply before servicing.
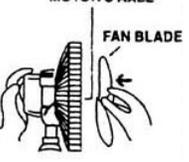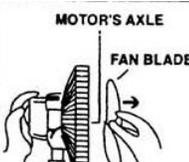
| | | |
|---|---|---|
|  | <p>2 POSITION CONTRIL. HI – LO</p> <p>ADJUST EASILY TO ANY ANGLE</p> | |
|  <p>STEEL RING</p> | <p>NOTE</p> <p>ON THE LEFT FIGURE, THERE IS A STEEL RING WHICH FIXES THE FAN BLADES IN PLACE. DO NOT RELEASE IT.</p> | |
|  <p>MOTOR'S AXLE FAN BLADE</p> |  <p>MOTOR'S AXLE FAN BLADE</p> | <p>HOLD THE MOTOR FIRMLY, PULL THE BLADE OUT PARALLEL TO THE MOTOR AXLE.</p> <p>TO REPLACE THE BLADE, HOLD THE MOTOR FIRMLY AND PRESS THE BLADE ONTO THE MOTOR AXLE FIRMLY.</p> |


| | DESCRIPTION |
|----|----------------|
| 1. | FRONT GUARD |
| 2. | FAN BLADE |
| 3. | REAR GUARD |
| 4. | MOTOR COVER |
| 5. | PITCHING SCREW |
| 6. | BASE |
| 7. | SWITCH |
| 8. | RUBBER FOOT |
| 9. | POWER CORD |

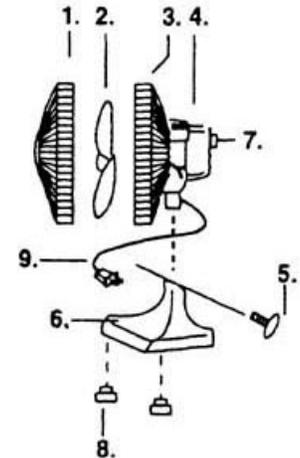

INSTRUCTION MANUAL

6" DESK FAN

CH-6DF

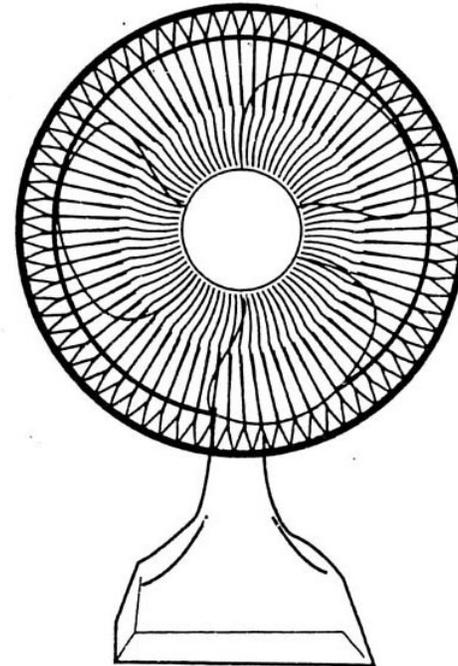

READ AND SAVE THESE INSTRUCTIONS
For product information, question, or customer service

Call Toll Free: 1-800-624-3436

E-mail: CustomerService@ComfortAirHelp.com

Website: www.comfortairhelp.com