

# **12/14//16/18 Inch High Velocity Fan CH-V12/CH-V14/CH-V16/CH-V18 INSTRUCTIONS FOR USE AND CARE**

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Use this fan only as described in this manual, Other use not recommended may cause fire, electric shock or injury.
2. High Velocity fans are designed to create rapid air movement, therefore make sure the fan is not placed near drapes, curtains or any objects that may be drawn into the fan inlet.
3. To protect against electrical shock, do not immerse unit, plug or cord in water or spray with liquids.
4. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug the fan from the outlet when not in use, when moving fan from one location to another, servicing and before cleaning.
6. Do not operate fan in the presence of explosive and/or flammable fumes.
7. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
8. Avoid contact with moving fan parts.
9. To disconnect, grip the plug and pull it from the wall outlet, never yank the cord.
10. Always use on a dry level surface.
11. Do not hang or mount fan on a wall or ceiling.
12. Do not operate the fan without protective front and rear grilles in position.
13. Be careful not to place the fan too close to the edge of the surface.
14. Do not use outdoors.
15. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.

# READ AND SAVE THESE INSTRUCTIONS

**WARNING: TO reduce the risk of fire or electrical shock, DO NOT USE THIS FAN with any SOLID STATE Speed Control Device. IF the supply cord is damaged, it must be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid any hazards.**

## **OPERATION**

1. Tighten the front guard to rear guard with screw and nut provided.
2. Set your fan on a level dry surface.
3. Plug the power cord into a standard 120 Vac wall outlet.
4. To operate your fan, turn the control knob to the desired fan speed low (I), Med(II) high (III)
5. Adjust the fan head to your desired angle.

## **CARE AND STORAGE**

1. Turn the control to **OFF** and **UNPLUG THE FAN BEFORE CLEANING.**
2. Use only a soft damp cloth to clean the fan.
3. **DO NOT** immerse the fan in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. Store the fan in its original box or cover the fan to protect it from dust. Store it in a cool dry place.

