


4" High Velocity Fan
Model: CH-V4

INSTRUCTION MANUAL

READ AND SAVE THIS INSTRUCTION

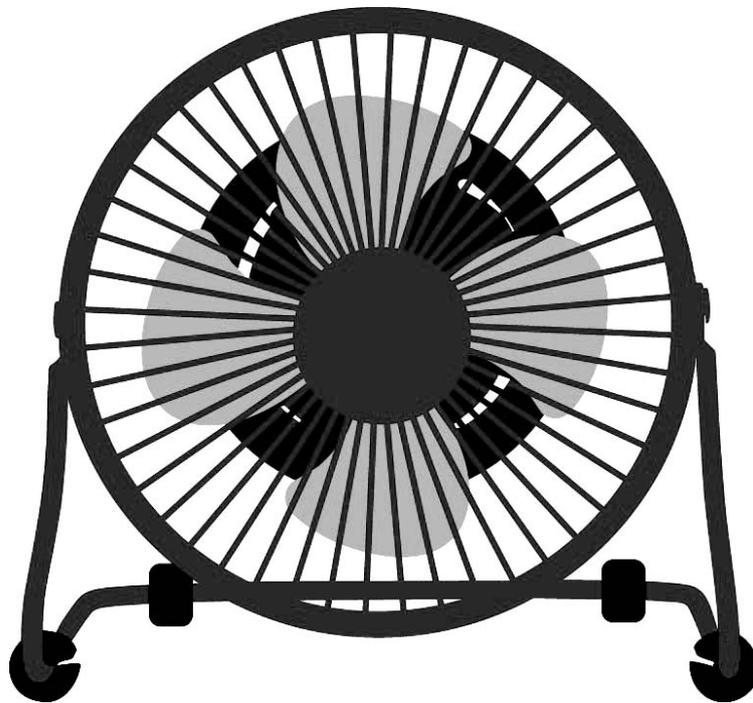

Please read these instructions carefully and keep for future reference

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

WARNING! To reduce the risk of fire or electrical shock, **DO NOT** use this fan with any solid-state control device.

To reduce the risk of fire or electrical shock, **DO NOT** expose to water or rain.

CAUTION: Read and follow all instructions before operating fan. Do not use fan if any parts are damaged or missing.

RULES FOR SAFE OPERATION

1. Use fan only for intended use, as described in instruction manual.
2. To protect against electrical shock, do not immerse unit, plug, or cord in water or spray with liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
5. Never insert fingers, pencils or any other objects through the grille when fan is running.
6. Disconnect fan before cleaning.
7. Make sure fan is on a stable surface. When operating to avoid chance of overturning.
8. Do not use fan outdoors.
9. Do not operate in the presence of explosive and/or flammable fumes.
10. Do not place fan or any parts near an open flame. Cooking or other heating appliances.
11. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
12. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
13. Always use on a dry surface.
14. This product is intended for household use only and not for commercial or industrial use.
15. Do not use fan near curtains, plants, window treatments, etc.

POLARIZED PLUG

NOTE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way.

If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

POWER CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT : During the first few minutes of initial use, you may notice a slight odor. This is normal and will quickly disappear

OPERATION INSTRUCTIONS

1. Set your fan on a level dry surface.
2. Plug the power cord into a polarized 120V AC wall outlet.
3. Adjust the fan head to your desired angle.
4. To operate your fan, turn the control knob to “■”(on).

USER MAINTENANCE INSTRUCTIONS

1. Turn the control to “O”(off) and UNPLUG THE FAN BEFORE CLEANING.
2. Use only a soft damp cloth to clean the fan.
3. DO NOT immerse the fan in water and never allow water to drip into the motor housing.
4. DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
5. Store the fan in its original box or cover the fan to protect it from dust. Store it in a cool dry place.