


INSTRUCTION MANUAL

9" HIGH VELOCITY FAN

CH-V9

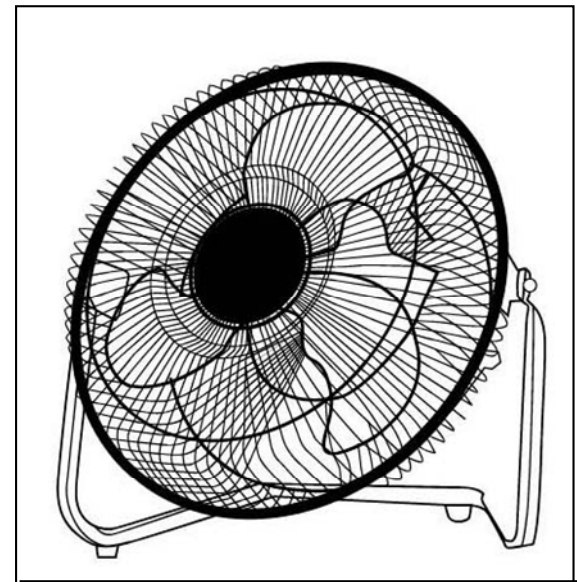

READ AND SAVE THESE INSTRUCTIONS

For product information, question, or customer service

Call Toll Free: 1-800-624-3436

E-mail: CustomerService@ComfortAirHelp.com

Website: www.comfortairhelp.com

INSTRUCTIONS FOR USE AND CARE

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING.

1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury.
2. High velocity fans are designed to create rapid air movement, therefore make sure the fan is not placed near drapes, curtains or any objects that may be drawn into the fan inlet.
3. To protect against electrical shock, do not immerse unit, plug or cord in water or spray with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the fan from the outlet when not in use, when moving fan from one location to another, servicing and before cleaning.
6. Do not operate fan in the presence for explosive and / or flammable fumes.
7. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
8. Avoid contact with moving fan parts.
9. To disconnect, grip the plug and pull it from the wall outlet, Never yank the cord.
10. Always use on a dry level surface.
11. Do not hang or mount fan on a wall or ceiling.
12. Do not operate without the fan grills properly in place.
13. Be sure to center this fan when using it on an elevated surface and be careful not to place the fan too close to the edge of that surface.
14. Do not use outdoors.
15. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
16. This appliance has a polarized plug (one blade is wider than the other).

To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. avoid a hazard.

WARNING: To reduce the risk of fire or electrical shock, DO NOT USE THIS FAN with any SOLID STATE Speed Control Device.

OPERATION

1. Set your fan on a level dry surface.
2. Plug the power cord into a grounded 120V AC wall outlet.
3. To operate your fan, turn the control knob to the desired fan speed Low (I), High (II) or Super (III).
4. Adjust The fan head to your desired angle.

CARE AND STORAGE

1. Turn the Control to OFF and UNPLUG THE FAN BEFORE CLEANING.
2. Use only a soft damp cloth to clean the fan.
3. DO NOT immerse the fan in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. Store the fan in its original box or cover the fan to protect it from dust. Store it in a cool dry place.